



# DVD-Player

## AD-L 528



# Manual

## Bedienungsanleitung

### Mode d'emploi

[www.cyberhome-europe.de](http://www.cyberhome-europe.de)



# Safety Instructions

---

## Dear Customer,

May we take this opportunity to thank you for purchasing this DVD-Player. We strongly recommend that you carefully study the Operating Instructions before attempting to operate the unit and that you note the listed precautions.

### ■ Power cord protection

To avoid any malfunctions of the unit and to protect against electric shock, fire or personal injury, please observe the following:

- Hold the plug firmly when connecting or disconnecting the AC power cord to this unit.
- Do not connect or disconnect the AC power cord when your hands are wet.
- Keep the AC power cord away from heating appliances.
- Never put any heavy object on the AC power cord.
- Do not attempt to repair or reconstruct the AC power cord in any way.
- Remove dust, dirt, etc. on the plug at regular intervals.
- If the unit has been dropped or otherwise damaged, turn off the power and disconnect the AC power cord.
- If smoke, odours or noises are emitted from the unit, turn off the power and disconnect the AC power cord.

### ■ Placement

Avoid placing the unit in areas of:

- direct sunlight, heating radiators or closed automobiles
- high temperature [over 35° C (95°F)] or high humidity (over 90%)
- excessive dust
- vibration, impact or where the surface is tilted, as the internal parts may be seriously damaged

### ■ Non-use periods

- When the unit is not used, turn the power off.
- When the unit is unused for a long period of time, the unit should be unplugged from the household AC outlet.

### ■ No fingers or other objects inside

- Touching internal parts of this unit is dangerous and may cause serious damage to the unit. Do not attempt to disassemble the unit.
- Do not put any foreign object on the disc tray.

### ■ Keep away from water and magnets

- Keep the unit away from flower vases, tubs, sinks, etc. If liquids are spilled into the unit, serious damage could occur.
- Keep magnetic objects, such as speakers, distant from the player.

### ■ Stacking

- Place the unit in a horizontal position and do not place anything heavy on it.
- Do not place the unit on amplifiers or other equipment, which may become hot.

### ■ Condensation

Moisture may form on the lens in the following cases:

- immediately after a heater has been turned on
- in a steamy or very humid room
- the unit is moved from a cold environment to a warm one

If moisture forms inside this unit, it may not operate properly.

In this case, turn off the power and wait about one hour for the moisture to evaporate.

### ■ Noise interference on the TV while a broadcast is being received

Depending on the reception condition of the TV, interference may appear on the TV screen while you are watching a TV broadcast, if the unit is switched on. This is not a malfunction of the unit or the TV. To watch a TV broadcast, turn off this unit.

---

---

**WARNING**

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR ANNOYING INTERFERENCE, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE AND ONLY USE THE RECOMMENDED ACCESSORIES.**

**CAUTION**

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL FOR SERVICING.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of not isolated "dangerous voltage" within the inside of the product that may be sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

**Use of the controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.**

**DANGER**

**Invisible laser radiation when cover is opened and interlock failed or defeated. Avoid direct exposure to beam.**

The DVD-Player is a class 1 laser product. However, this DVD-Player uses a visible laser beam, which could cause hazardous radiation exposure, if directed. Be sure to operate the DVD-Player correctly as instructed.

When this DVD-Player is plugged into the plug socket, do not place your eyes close to the opening of the disc tray and other openings to look into the inside of this player.

Do not open covers and do not repair yourself. Refer to the qualified personnel for servicing.

**CLASS 1  
LASER PRODUCT**

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

This DVD-Player has been constructed and produced in the way that it adheres to "Locale Management" information, which are recorded on a Digital Video Disc (DVD). If the number of the destination area on a DVD does not correspond with the number of the destination area of this DVD-Player, this device won't be able to play the corresponding disc. The device is set to region code "2".

This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

# TABLE OF CONTENTS

■ Table of contents & Features	1	■ Special playing functions	13-14
■ Preparation knowledge	2	■ Special features for DVD	15-16
■ Points for attention	3	■ Special features for VCD	16
■ Operation	4-7	■ On screen display and programming	17
■ Electrical Connections	8-9	■ Problem handling	18
■ Viewing & Listening	9	■ Specifications/Accessories	19
■ Setup	10-12	■ List of languages	20
		■ Technical terms	21-22





## FEATURES

### General Functional Features:

- Supports the following disc formats:  
Suitable for DVD, Video CD (versions 1.1 and 2.0), SVCD, conventional Audio CD's, CD-R/RW, MP3 and DTS discs.
- Multiple levels of slow playback:  
Slow motion without distracting signals in various speeds.
- Repeat playback:  
Video segments can be selected for repeat playback.
- Display optional in different languages:  
Usage mode will be displayed on the screen in different languages.
- Presetting functions for DVD, VCD and CD:  
Simple preset selection method during DVD, VCD and CD modes are provided; the playback sequence of programs can be arranged in your own way.
- Multi-functional remote control:  
A great number of functions can be controlled by the remote control in a convenient way.
- Direct selecting function (DVD, VCD, MP3 and CD):  
Numbered buttons for quick direct selection of DVD, VCD, MP3 and CD titles.
- Multi-channel selection:  
Allows selection between 2 channel stereo output and 5.1 channel surround output.

# PREPARATION KNOWLEDGE

This device supports the following disc formats:

Suitable discs & their marks	Diameter / Side / Layer	Maximum playing time
	DVD 12 cm / Single / Single 12 cm / Single / Double 12 cm / Double / Single 12 cm / Double / Double	MPEG II TYPE 133 min. (4.7 GB) max. 242 min. (8.5 GB) max. 266 min. (9.4 GB) max. 484 min. (17 GB) max.
	VCD 12 cm / Single / Single	MPEG I TYPE 74 min. max.
	SVCD 12 cm / Single / Single	MPEG II TYPE
	CD - DA 12 cm / Single / Single	74 min. max.
	CD - DA 8 cm / Single / Single	20 min. max.
	MP3 8 cm / Single / Single 12 cm / Single / Single	MPEG I layer - III 640 min. max.

- DVD and VCD: Audio and Video discs (including multi-channel playback)
- CD-DA and MP3: Only Audio discs
- This device conforms to the standards of DVD, SVCD, VCD (v1.1 and v2.0). You can perform different playback functions depending on the type of discs.
- Don't load any exceptional discs in the Player, as this will cause null playback or other problems.

# POINTS FOR ATTENTION

 Please consider the following points in order to use this disc player correctly and safely.

### **Power:**

- Please connect the device to the correct power outlet (V AC 110 oder 220/240 oder 110/230 Switch). Please compare the mains voltage on the rear panel.

### **Power Lines:**

- Please DO NOT place heavy objects on the device, as this may result in fire and electric leakage.
- When the player is not in use for a long time, disconnect the power line/s.

### **Suitable Location:**

- Please do not place the device on the following locations:
  - easily affected by vibration
  - with high humidity
  - with poor ventilation
  - with direct sunlight
  - with too high or too low temperature

 
- The device should be placed on a leveled surface.
- To prevent being affected by electromagnetic fields, please place the device away from television, radio, computer and speaker.

### **Safety Notice:**

- Contacting the device's internal structure may result in the danger of electrical shock, thus please DO NOT remove the upper lid.
- Never place heavy objects on the device.


### **Prevention of Condensation:**

- When the device is suddenly moved from a cold to a warm location, it may cause the production of dew. Thus, please keep the device switched off for about 1-2 hours before the playback of any titles.

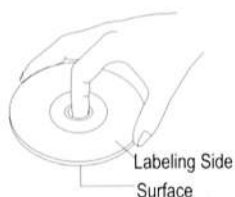

### **Handling of Discs:**

 
Please hold the disc by gripping the rim or by placing the index finger in the central hole. Never touch the signal surface, which is shiny. (Both sides for double side discs.)

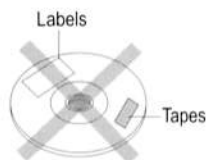

Never add labels or adhesive tapes on the discs and do not scratch or damage the discs.

### **Cleaning of Discs:**

 Finger prints or stains on the surface of the disc will directly affect signal missing. Depending on the degree of stain, the reflected luminosity from the signal surface may be weakened, resulting in a poorer picture quality. Therefore, please use a soft cloth and wipe in a radiating manner from the centre to the outer rims when cleaning the disc.



If the surface of your disc is very dirty, please wipe the disc with a moist cloth, finally use a dry soft cloth to remove all the water stains.

Never use electrostatic prevention products as well as solutions which contain benzene, thinner or any other vaporizing substances, as they may damage the disc surface.

### **Storage of Discs:**

To prevent discs from getting bent or deformed, they should be vertically kept in the disc storage case. To prevent damages, avoid placing them in a car, which may contact direct sunlight.

Please thoroughly read the "Instruction Points for Attention" on the discs.

### **Cleaning of Player:**

The control panel and the case of the player only require wiping with a soft cloth. Areas with stubborn stains can be cleaned with a soft cloth dipped in a neutral detergent. To prevent damaging the player, never use vaporizing solutions.

### **Disc Accessory:**

Do not use any disc accessory to improve the audio quality or disc protective and lens cleaner, both will cause failure.

